

**USER MANUAL for**

**Alcohol burner, article number 7200**

1. This burner is made of stainless steel.  
The burner has a volume of 150ml spirit.  
To fill the burner, you have to screw open the top (2)  
(Turn left to open, turn right to close)
2. After filling and closing the burner you have to swivel the wick (1) out of the burner about 5mm (3).  
(Turn right for wick up, turn left for wick down)
3. The wick now will suck the spirit (1)  
Then you can burn the wick.  
After the wick is burning you can swivel the height of the flame at the right position (3).
4. To stop the flame after using, please use the lid (4) to cover and the flame will get off.
5. Please see all details at the attached drawing of the spirit burner 7200.
6. Warning:  
The spirit burners may only be used and ignited in horizontal position.  
In general, spirit burners, kerosene lamps and other liquid fuel containers should not be tilted.  
If the burner is placed down after tilting, the spirit will flow off through the hole for pressure compensation. However, a residual volume remains in the burner, which only fully evaporates after approx. 2-3 minutes. If the wick is ignited during that time, there is a risk of a deflagration of the alcohol that has remained in the burner head.

